


# Bill of Materials Listing

TransArctic Canada Inc.

7/30/2012  
Page 1 of 1

Product Number	Description	Date	Weight	Uof M	Yield
Line Component Prod#	Description	Bin Unit	Qty		
<b>KMK62013</b>	<b>Mt Kit, 3126, FTLR, Conv, 200a, 2 TM-16</b>	<b>03/27/02</b>	<b>13.49</b>		<b>0</b>
10 BEL82490	Belt, 8gr, 2490mm (98") (5080980)	each	1		
20 BMK61001	Bkt, Main, 3126 FrtInr	each	1		
30 BMK61002	Bkt, Support, Weldment, 3126FrtInr	each	1		
40 BMK61004	Bkt, Cradle, Idler Pulley,3126FrtInr	each	1		
50 BMS16005	Bkt, Low, Front, TM-16	each	1		
60 BMS16006	Bkt, Low, Rear, TM-16	each	1		
63 SLV17013	Sleeve, Pulley, 16.9o x 22.23mm x 12.7i	each	1		
66 SPC19013	Spacer, Col, Drl, 19mm x 28.58o x 12.7i	each	1		
70 PUL80076	Pulley, Idler, Backside, P8, 76d (89101)	each	2		
80 BTS10001	Bolt, Shoulder, 10mm (89064)	each	2		
90 WDS17001	Washer, Dust Cover (89060)	each	2		
100 BTC10050	Bolt, Hex, 10 x 1.5 x 50mm, 10.9, Plt	each	3		
110 BTC10055	Bolt, Hex, 10 x 1.5 x 55mm, 10.9, Plt,FT	each	1		
120 BTC10045	Bolt, Hex, 10 x 1.5 x 45mm, 10.9, Plt,FT	each	1		
130 BTS08450	Bolt, Hex, 1/2-13unc, 4.5", 8, Plt	each	1		
140 BTC10025	Bolt, Hex, 10 x 1.5 x 25mm, 10.9, Plt	each	4		
150 BTC10030	Bolt, Hex, 10 x 1.5 x 30mm, 10.9, Plt	each	1		
160 BTC10035	Bolt, Hex, 10 x 1.5 x 35mm, 10.9, Plt,FT	each	4		
170 NTA10000	Nut, Hex, 10 x 1.5, 8.8, Plt	each	11		
175 NTQ08000	Nut, Hex, 1/2-13unc, 8, Plt	each	1		
180 WLA10000	Washer, Lock, 10mm, 8.8, Plt	each	13		
190 WFA10000	Washer, Flat, 10mm, 8.8, Plt	each	10		
200 WFQ08000	Washer, Flat, 1/2", 8, Plt	each	1		
210 WLQ08000	Washer, Lock, 1/2", 8, Plt	each	1		

**KMK62013 \_ 3126, FTLR CONV, 200A, 2 TM-16**

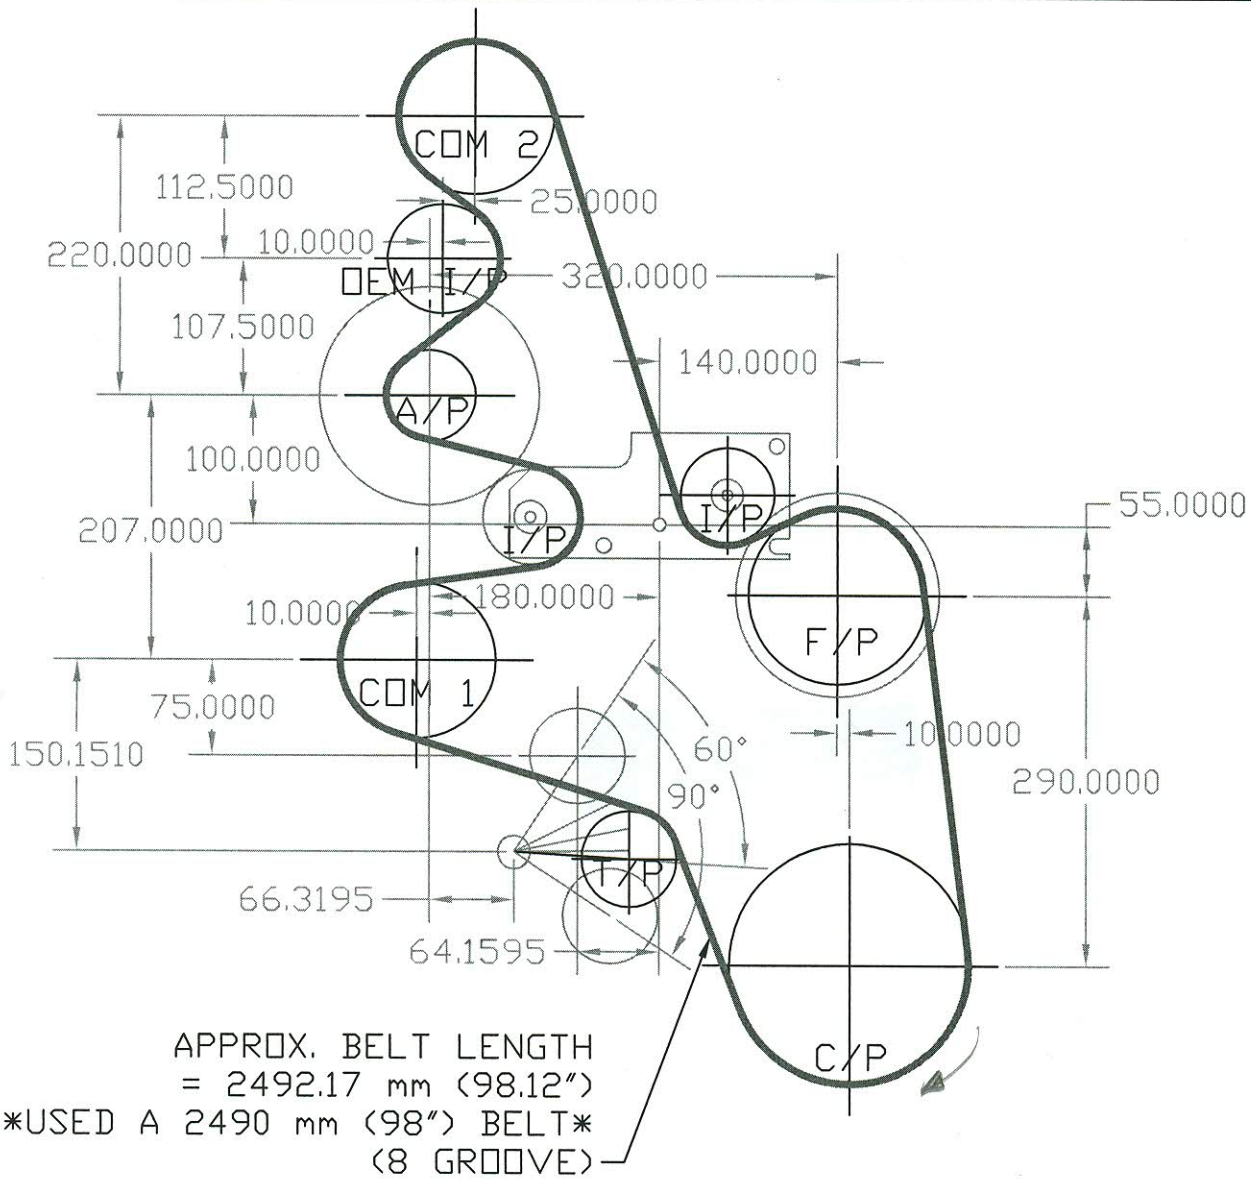


2x TM-16 COMPRESSORS MOUNTING:  
 (c/w 200 amp Alt.)

JUL 31 2002

**COPY**



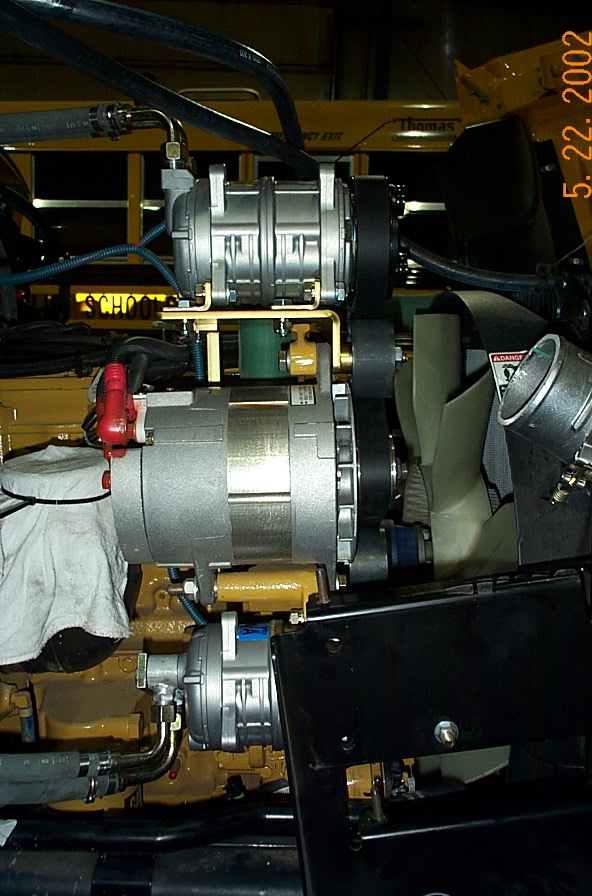


5.22.2002

SCHOOL BUS


EMERGENCY EXIT  
Thomas

ADANGER

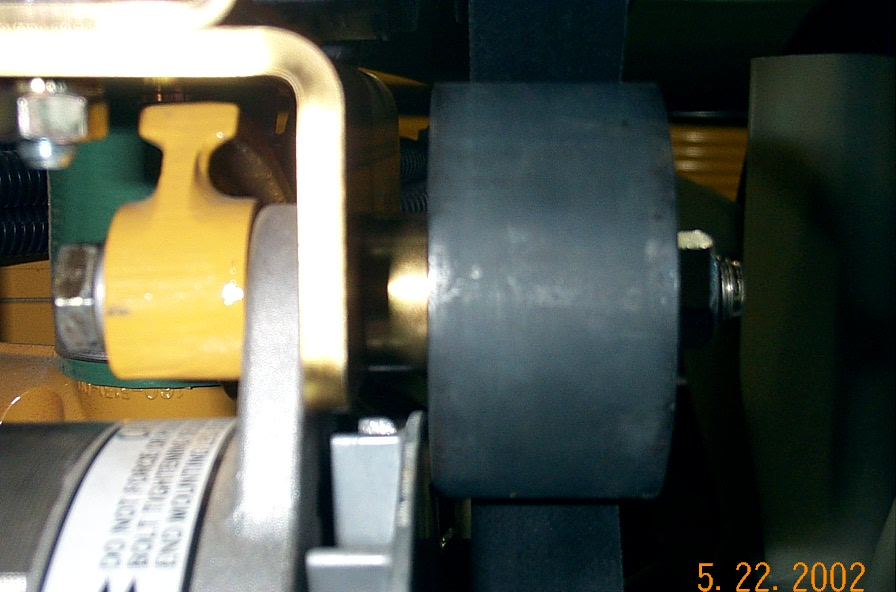


DO NOT FORCE OR  
BOLT TIGHTENING  
END INDICATING


5. 22. 2002

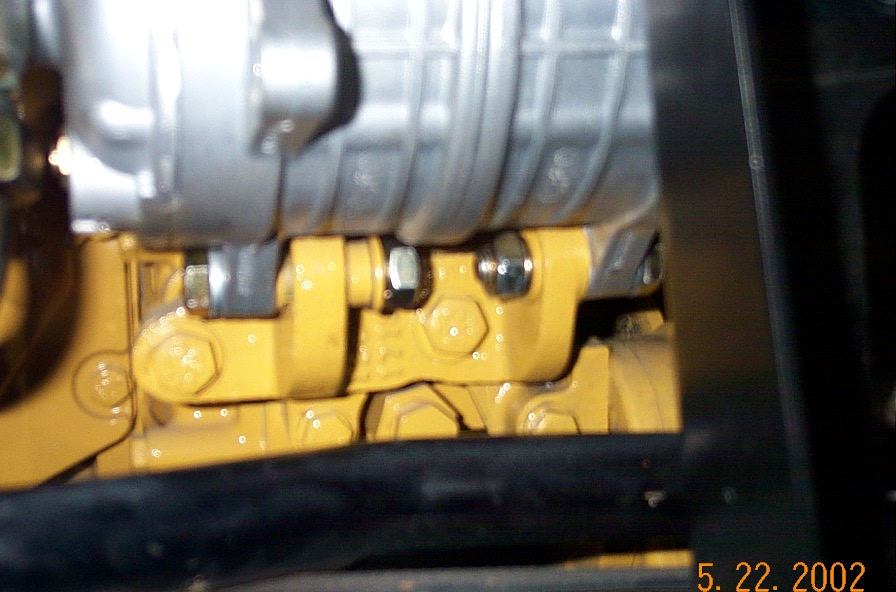

5. 22. 2002

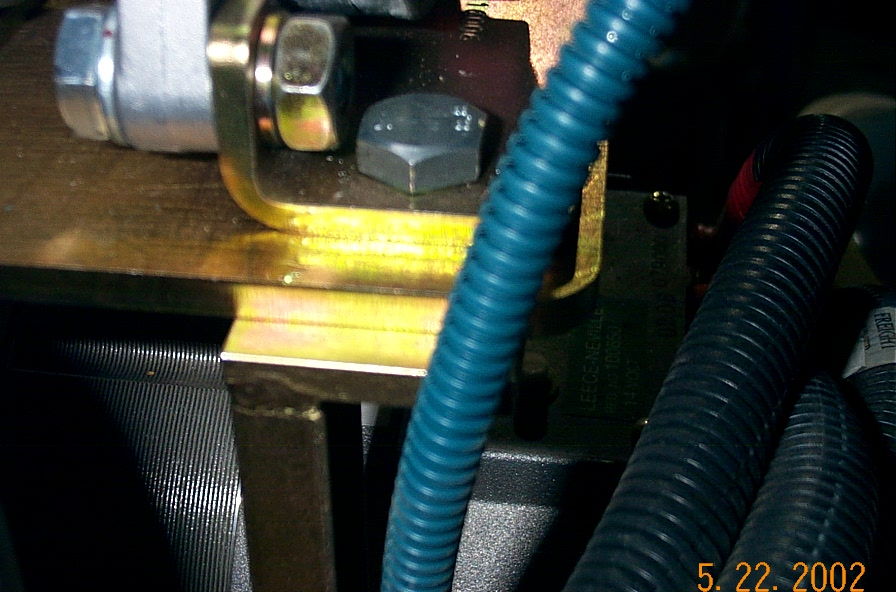


5.22.2002

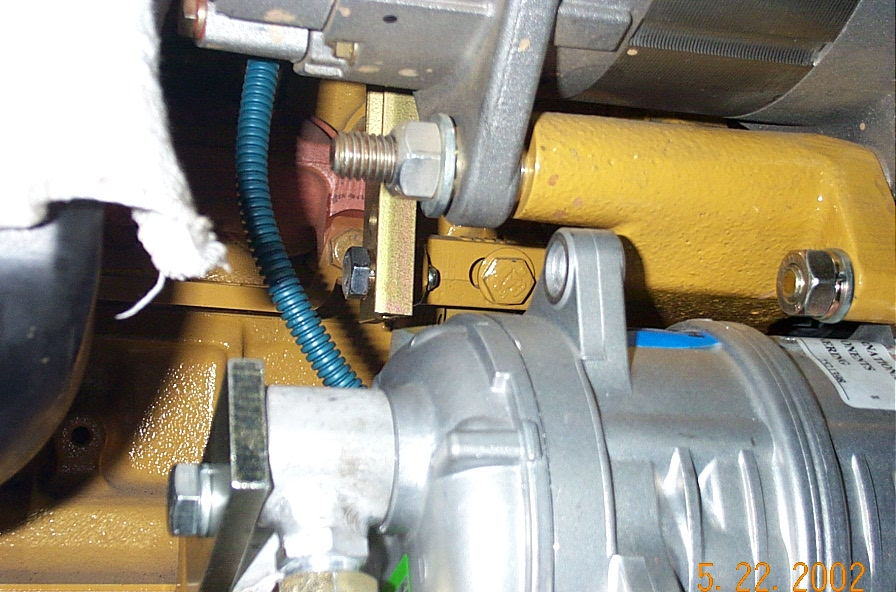

5. 22. 2002



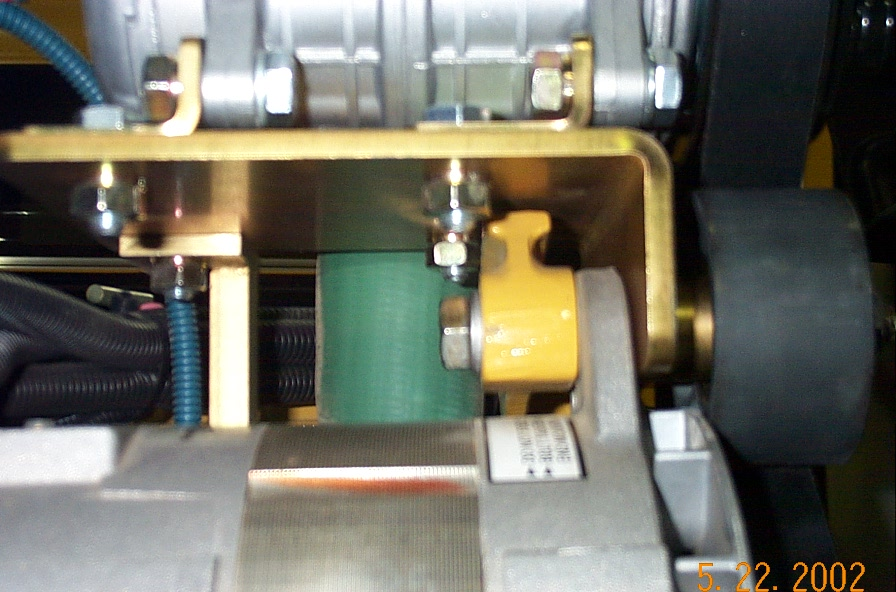

5.22.2002



## **TransArctic A/C Compressor Mount Installation Disclaimer**

All compressor mounts should be installed by qualified and trained personnel using proper tools and equipment in safe working conditions following industry standard guidelines for motor vehicle service and repair.

The installer of any compressor mount purchased from TransArctic must undertake all responsibility of issues arising from that compressor bracket being installed on any vehicle. As well as insure that a **proper and sufficient ground** is established between the compressors' clutches and the vehicle's engine. Mount functionality, operation and durability can all be compromised by an incompetent installation.

Due to the many different situations, parameters and application criteria, which are beyond the compressor mount manufacturer's control, TransArctic does not warrant design, durability, or operational functionality of any compressor mount improperly installed by another party.

**With no implied guarantees it is the mount installer's strict responsibility to determine safety and functionality, of the compressor mount, at the time of installation.**

Please contact TransArctic with any issue arising from installation so we may better improve the product. If you have any reservations about the compressor mount integrity contact TransArctic immediately at 1-877-COLD-AIR.

**Mark OEM tensioner location**

**Install Kit**

**Check for Interferences**

**Check to ensure that the proper OEM tensioner orientation is maintained**

**Run engine with A/C system engaged for at least 10 minutes to run in belt**

**Check OEM tensioner orientation and adjust as required**

### **Responsabilidad limitada de TransArctic en la instalación del soporte del compresor**

Todos los soportes de los compresores deben ser instalados por personas calificadas y entrenadas, usando para ello los equipos y herramientas necesarios para esta labor en buenas condiciones y según las normas y guías para el servicio y/o reparación de motores de vehículos.

El instalador de los soportes comprados en TransArctic asume toda la responsabilidad de cualquier problema que surja en el soporte del compresor al vehículo; de igual manera es responsable que el cable a tierra sea conectado entre el embrague del compresor y el motor del vehículo.

Se advierte que el buen funcionamiento y la durabilidad del soporte pueden ser comprometidos por defectos en su instalación.

Debido a las diversas situaciones que se puedan presentar fuera del control del fabricante, TransArctic no garantiza el diseño, la durabilidad o el correcto funcionamiento de cualquier equipo inapropiadamente instalado por terceros.

**Esta sobreentendido que el Instalador del montaje del compresor es estrictamente responsable de la seguridad y funcionamiento del equipo en el momento de la instalación.**

Si tuviera algún problema o duda acerca de la instalación del soporte del compresor pongase en contacto inmediatamente con TransArctic al teléfono 1-877-COLD-AIR de modo que podamos mejorar nuestro producto.

**Note la ubicación del medidor de tensión OEM**

**Instale el equipo**

**Controlar si hay interferencias.**

**Asegure que el medidor de tensión mantenga la orientación justa.**

**Encienda el motor por lo menos 10 minutos con el sistema A/C enganchado para que la correa corra**

**Controle la orientación justa del medidor de tensión y ajuste a las condiciones requeridas del fabricante**